


Jake Sales

www.jakesales.com
www.jake-sales.com

Installation Instructions Chain Link Fence Loop Cap “Eye Top”

- *Chain-Link Loop Caps are installed on line posts and used to secure the top rail in place.*
- *The Loop Cap is constructed of aluminum or pressed steel.*
- *Keeps water and snow out to prevent fence post internal damage*
- *The Loop Cap is easy install. Simply snap cap onto line post and slide top rail through loop.*
- *Always wear safety glasses & gloves*
- *Thank you for your order*

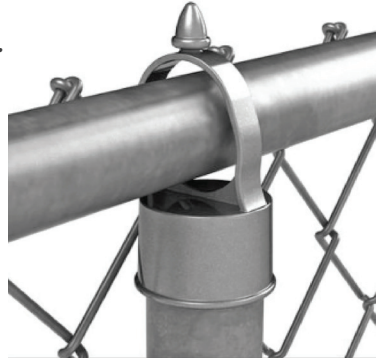

| SIZES | | |
|-------------------------------------|--------------------------------|------------------------------|
| | FENCE POST OUTSIDE DIAMETER | TOP RAIL OUTSIDE DIAMETER |
| Aluminum | 1-5/8" | 1-3/8" |
| Aluminum | 1-7/8" | 1-3/8" |
| Aluminum | 1-7/8" | 1-5/8" |
| Aluminum | 2-3/8" | 1-5/8" |
| Galvanized Pressed Steel | 1-5/8" | 1-5/8" |
| Galvanized Pressed Steel | 1-7/8" | 1-3/8" |
| Galvanized Pressed Steel | 1-7/8" | 1-5/8" |
| Galvanized Pressed Steel | 2-3/8" | 1-5/8" |
| Galvanized Pressed Steel | 2-7/8" | 1-5/8" |
| Galvanized Pressed Steel | 4" | 1-5/8" |
| Aluminum (Black Enamel Paint) | 1-5/8" | 1-3/8" |
| Aluminum (Black Enamel Paint) | 1-7/8" | 1-3/8" |



“For God so loved the world, that He gave his only begotten Son, that whosoever believeth in Him should not perish, but have everlasting life.” ~ John 3:16