


# Jake Sales

www.jakesales.com  
www.jake-sales.com

## Installation Instructions Chain Link Wire Tie (Aluminum or Black)



- Wire ties should be installed both vertically (along the posts) and horizontally (along the top rail).
- When installing along the post, take the height of the chain link and place one less than the height along the post. (For example... a four foot chain link should have three wire ties along each post.)
- When installing along the top rail, place wire ties every seven diamonds
- Wire ties are installed by connecting the hook to the diamond over the top of the top rail, then bending around the top rail and using pliers, wrapping the long end around the diamond below the top rail, this ensures that the fence is pulled in tightly against the top rail.
- Make sure to install the wire ties at equal heights along the top rail, otherwise the fence may not lie evenly along the top rail.

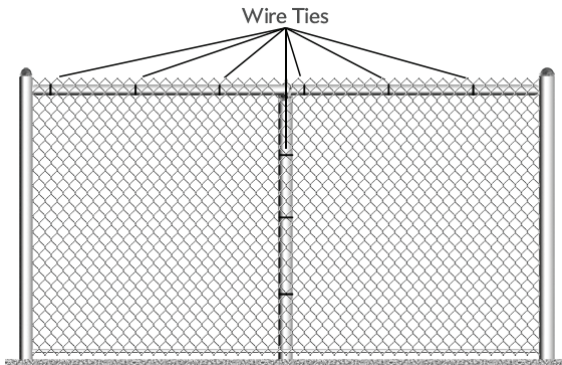

**Always Wear Safety Goggles & Gloves • Thank You for your order**

*"For God so loved the world, that He gave his only begotten Son,  
that whosoever believeth in Him should not perish, but have everlasting life." ~ John 3:16*