


# Installation Instructions Metal Roofing Screws

## Metal Roofing Screws Typical Quantities & Other Suggestions:

- 80 screws per 100 square feet (Roofing/Siding)
- Predrilling multiple sheets at once before installation results in consistent screw pattern lines
- Impact drivers are hard on painted coating. If possible, use a drill for installing screws

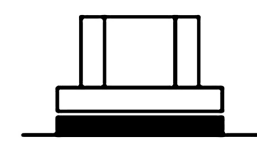

Correctly Driven Screws



Under-Driven Screws



Over-Driven Screws

**(Under or Over Driven Screws Can Result in Leaks)**



**Roofing Screw Pattern for Intermediate and Siding Application**



**Roofing Screw Pattern for Eaves, Ridges, and Endlaps**

**Always Wear Safety Goggles & Gloves • Thank You for your order**

*"For God so loved the world, that He gave his only begotten Son,  
that whosoever believeth in Him should not perish, but have everlasting life." ~ John 3:16*