


Installation Instructions

Metal Roofing Screws

Metal Roofing Screws Typical Quantities & Other Suggestions:

- 80 screws per 100 square feet (Roofing/Siding)
- Pre-drilling multiple sheets at once before installation results in consistent screw pattern lines
- Impact drivers are hard on painted coating. If possible, use a drill for installing screws

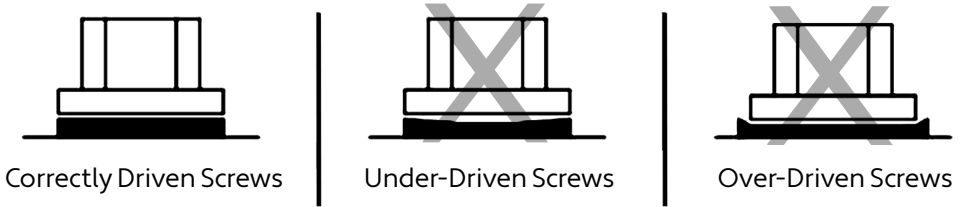

(Under or Over Driven Screws Can Result in Leaks)



Roofing Screw Pattern for intermediate and Siding Application



Roofing Screw Pattern for Eaves, Ridges, and Endlaps

Always Wear Safety Goggles & Gloves • Thank You for your order

*"For God so loved the world, that He gave his only begotten Son,
that whosoever believeth in Him should not perish, but have everlasting life." ~ John 3:16*