


Installation Instructions Construction Lag Round Washer Head Wood Screws

- Measure the wood to ensure the threading extends completely past the first board, allowing them to pull together tightly. (See Diagram)
- The knurl (if present) and shank of the screw may extend into the second board, but no threads should remain in the first piece.

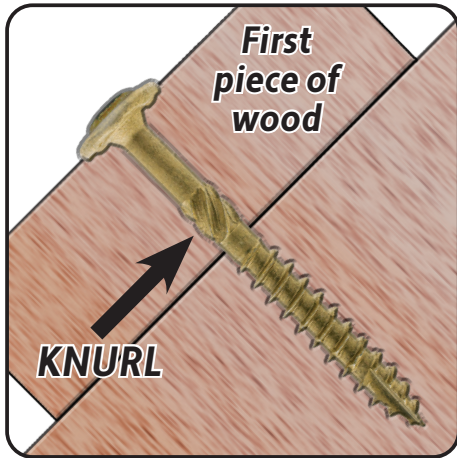

KNURL →

SCAN QR CODE
TO FIND ADDITIONAL
CONSTRUCTION SCREWS
FROM JAKE SALES



SIZES / STYLES AVAILABLE

(Use T25 Bit)

#14 X 1"

#14x 1-1/2"

#14 X 2"

#14 X 2-1/2"

#14 X 3"

#14 X 4"

#14 X 5"

#14 X 6"

(Use T30 Bit)

#15 X 2"

#15 X 2-1/2"

#15 X 3"

#15 X 3-1/2"

#15 X 4"

#15 X 5"

#15 X 6"

(Use T40 Bit)

#17 X 4"

#17 X 5"

#17 X 6"

#17 X 7"

#17 X 8"

#17 X 10"

#17 X 14"

#17 X 16"

**STAINLESS
STEEL**

(Use T30 Bit)

#15 X 2-1/2"

#15 X 3"

#15 X 4"

#15 X 5"

#15 X 6"

Always Wear Safety Goggles & Gloves • Thank You for your order

"For God so loved the world, that He gave his only begotten Son,
that whosoever believeth in Him should not perish, but have everlasting life." ~ John 3:16